

ACU-RITE® VUE

Step-by-Step Instructions for Changing Count Direction

ACU-RITE® VUE: *Changing Count Direction*




Start with the unit off.
Or turn it off and wait 10 seconds before you turn it back on.

ACU-RITE® VUE: Changing Count Direction



From the home screen, press the **ENTER** key.

ACU-RITE® VUE: Changing Count Direction

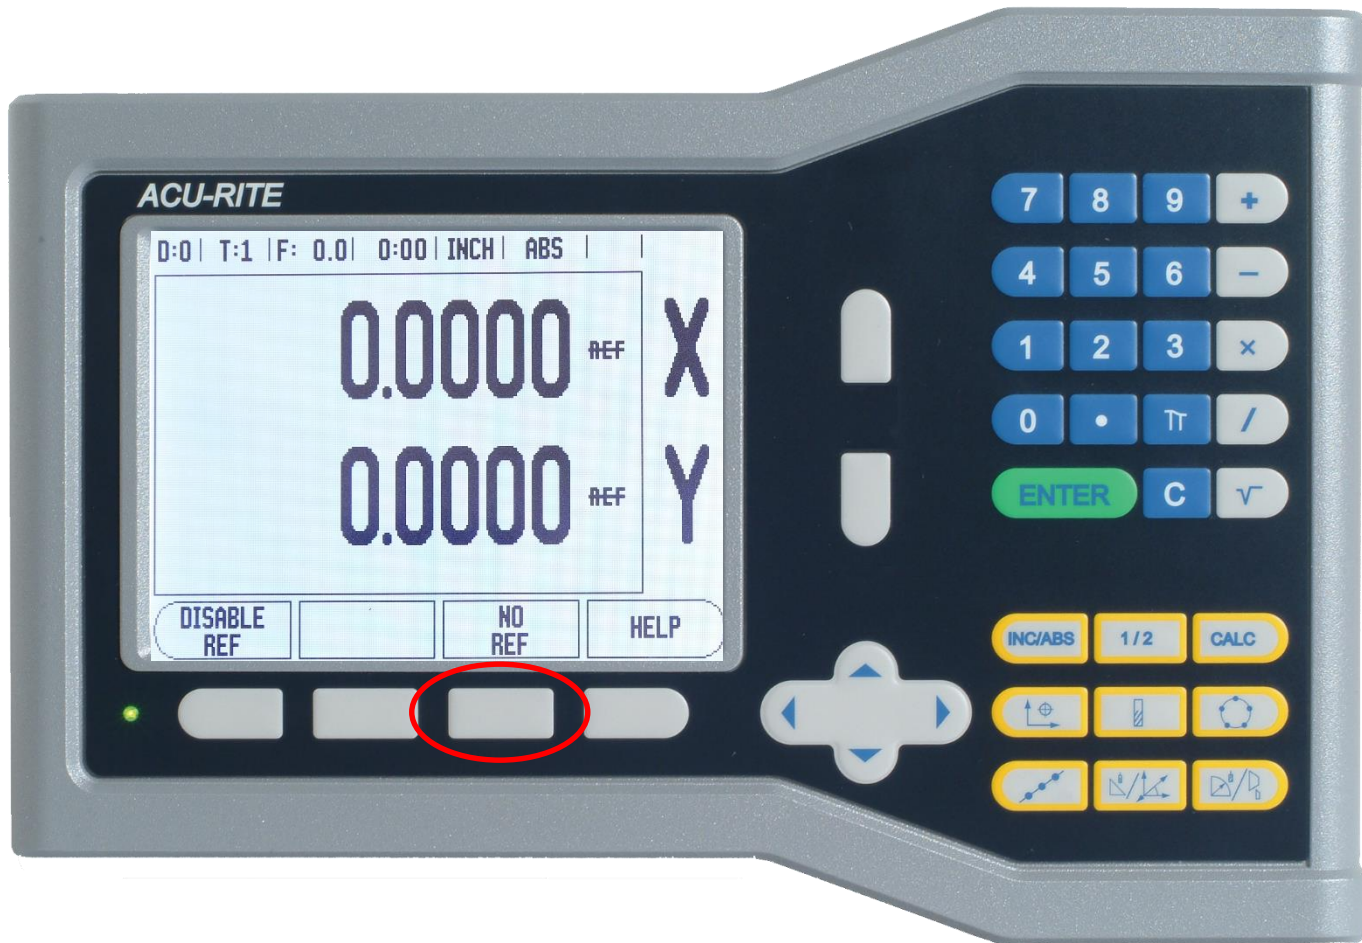

To change the count direction you don't need to reference the scale, so press the "NO REF" soft key.


ACU-RITE® VUE: Changing Count Direction




When the axis is moved in the positive direction, the DRO shows a negative number. Here's how to change it.


ACU-RITE® VUE: Changing Count Direction

Soft
Key
Menu

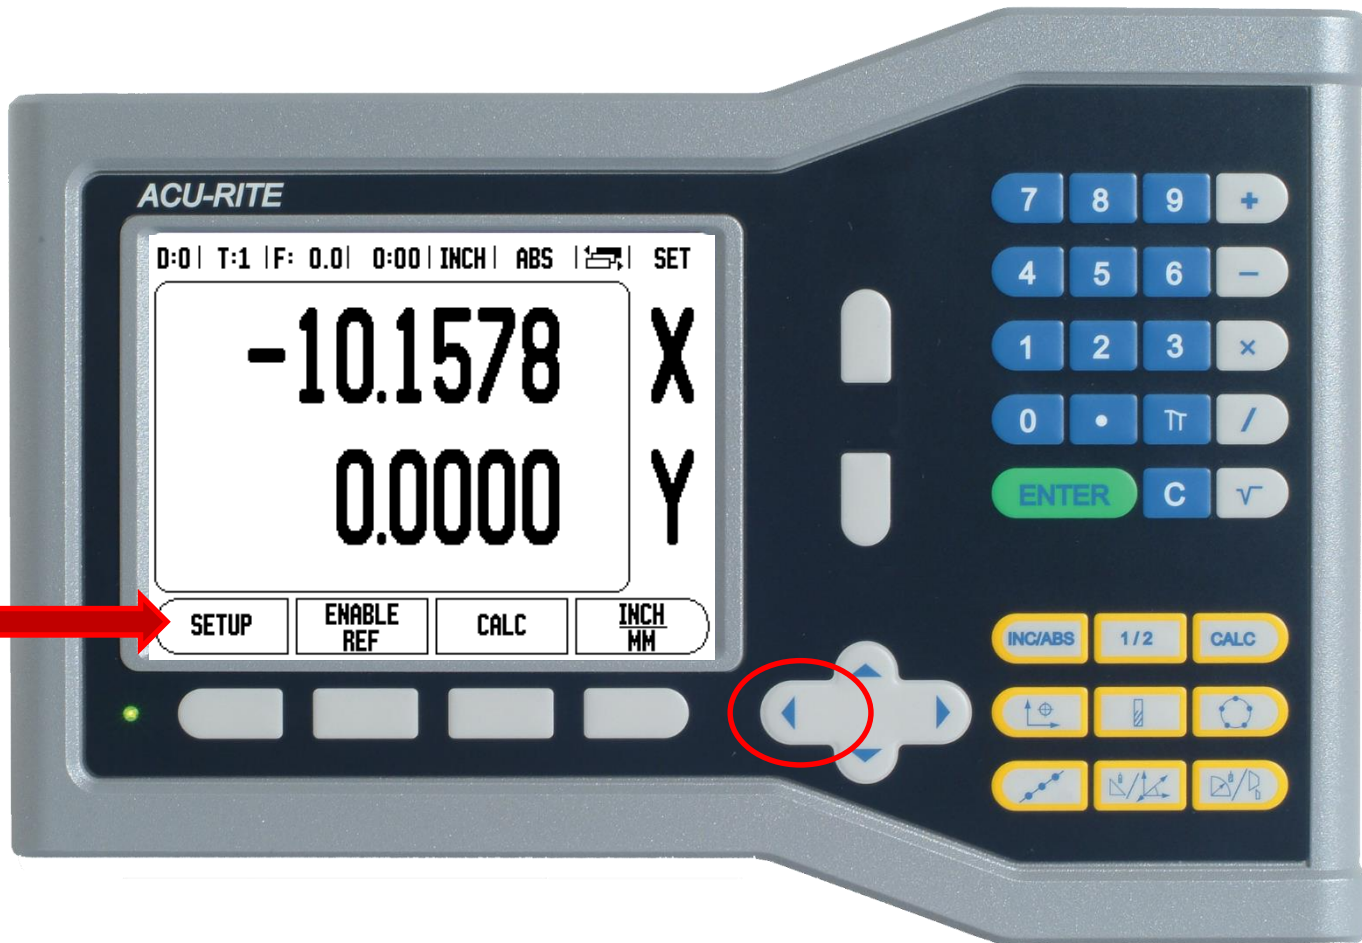


Press the  soft key until the first soft key menu space reads "SETUP."

ACU-RITE® VUE: Changing Count Direction

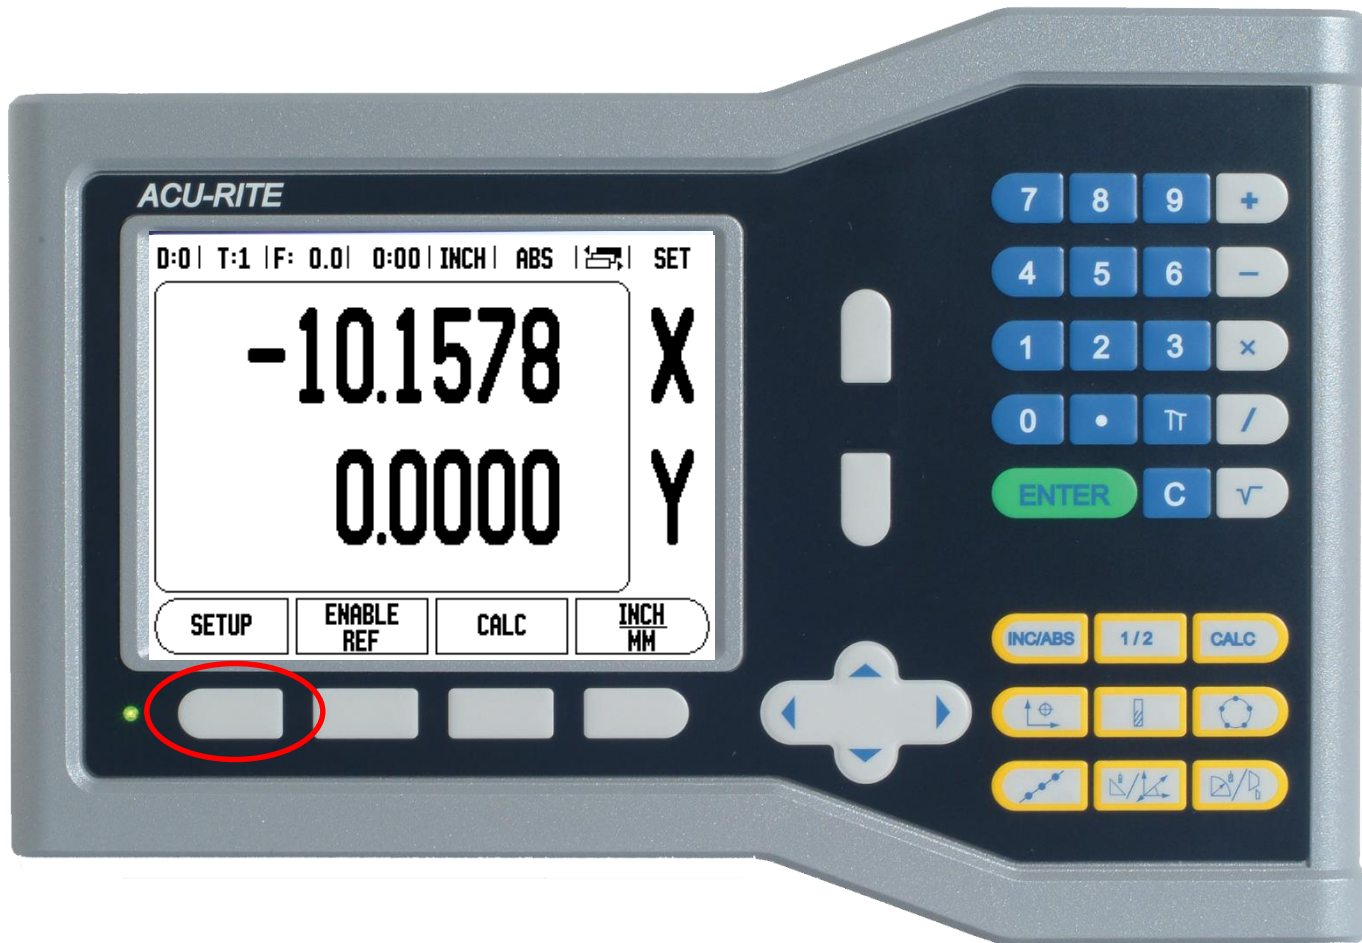

Press the "SETUP" soft key.

ACU-RITE® VUE: Changing Count Direction

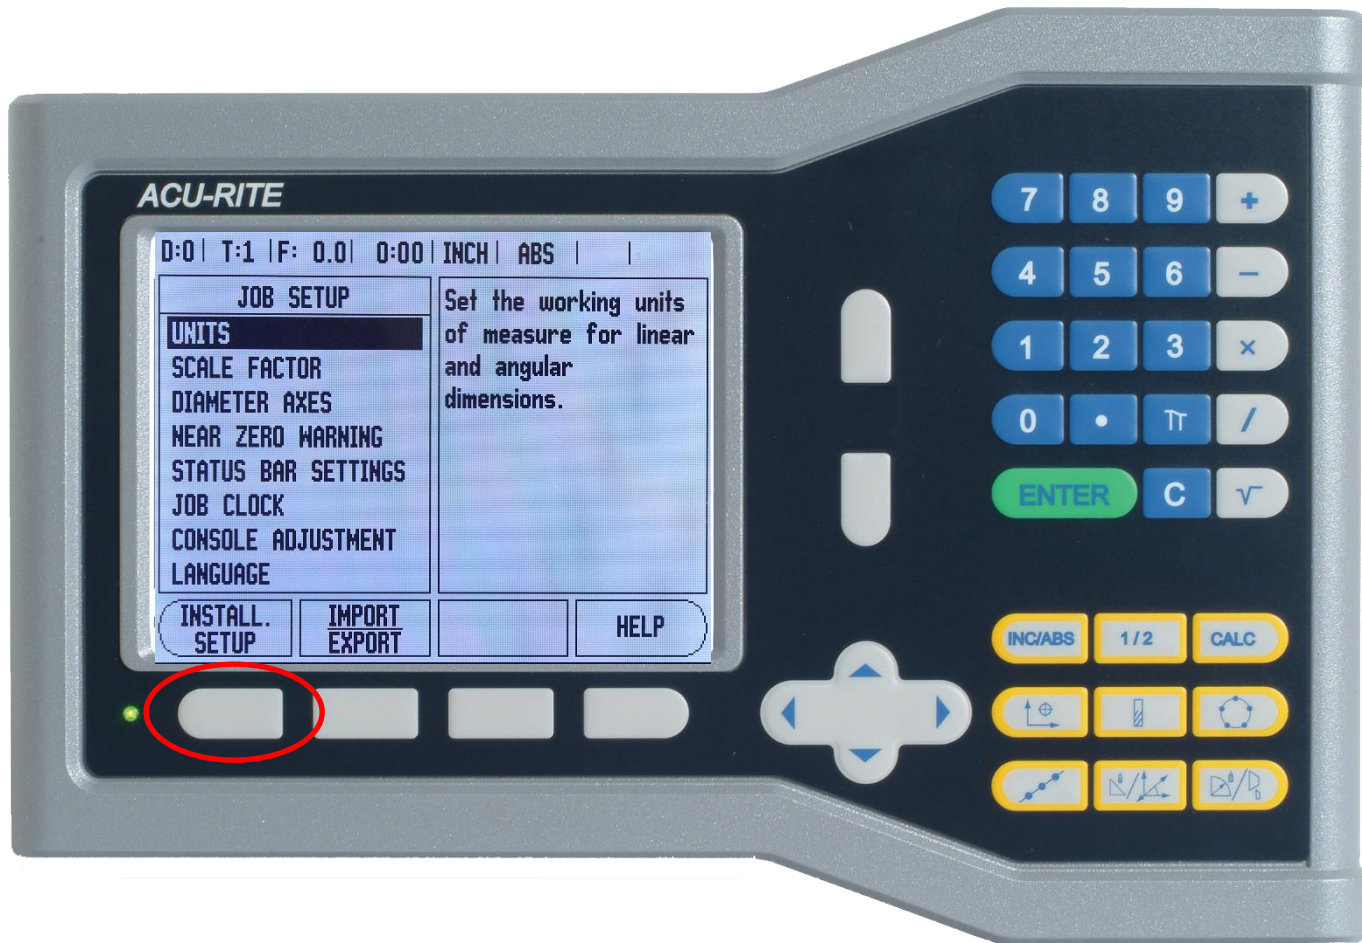

Press the “INSTALL SETUP” soft key.


ACU-RITE® VUE: Changing Count Direction



The DRO asks you for a “PASSCODE.”


Use the number soft keys and press: **8 8 9 1**

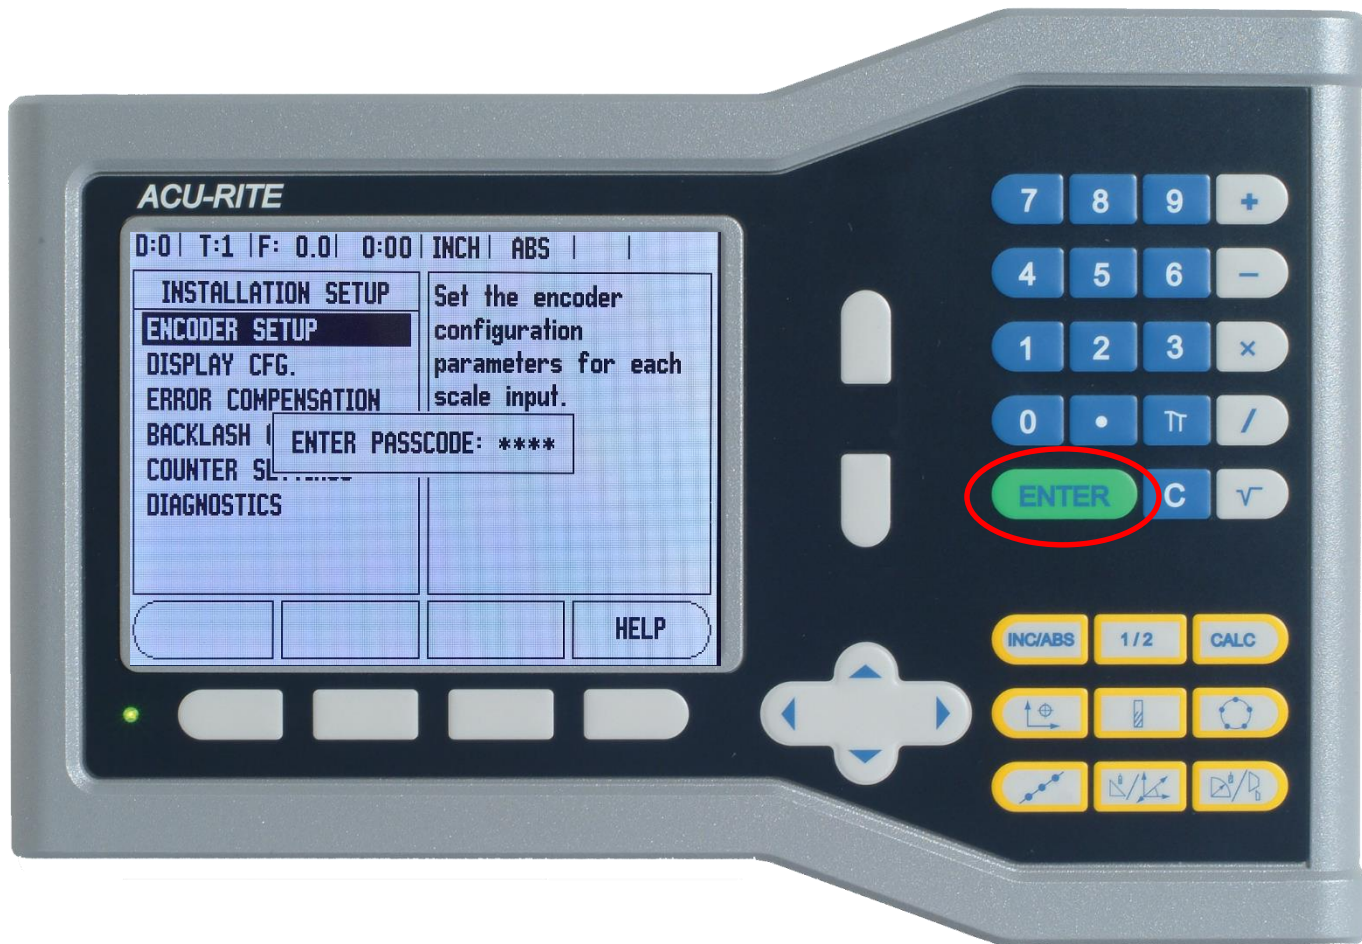


ACU-RITE® VUE: Changing Count Direction



Press 

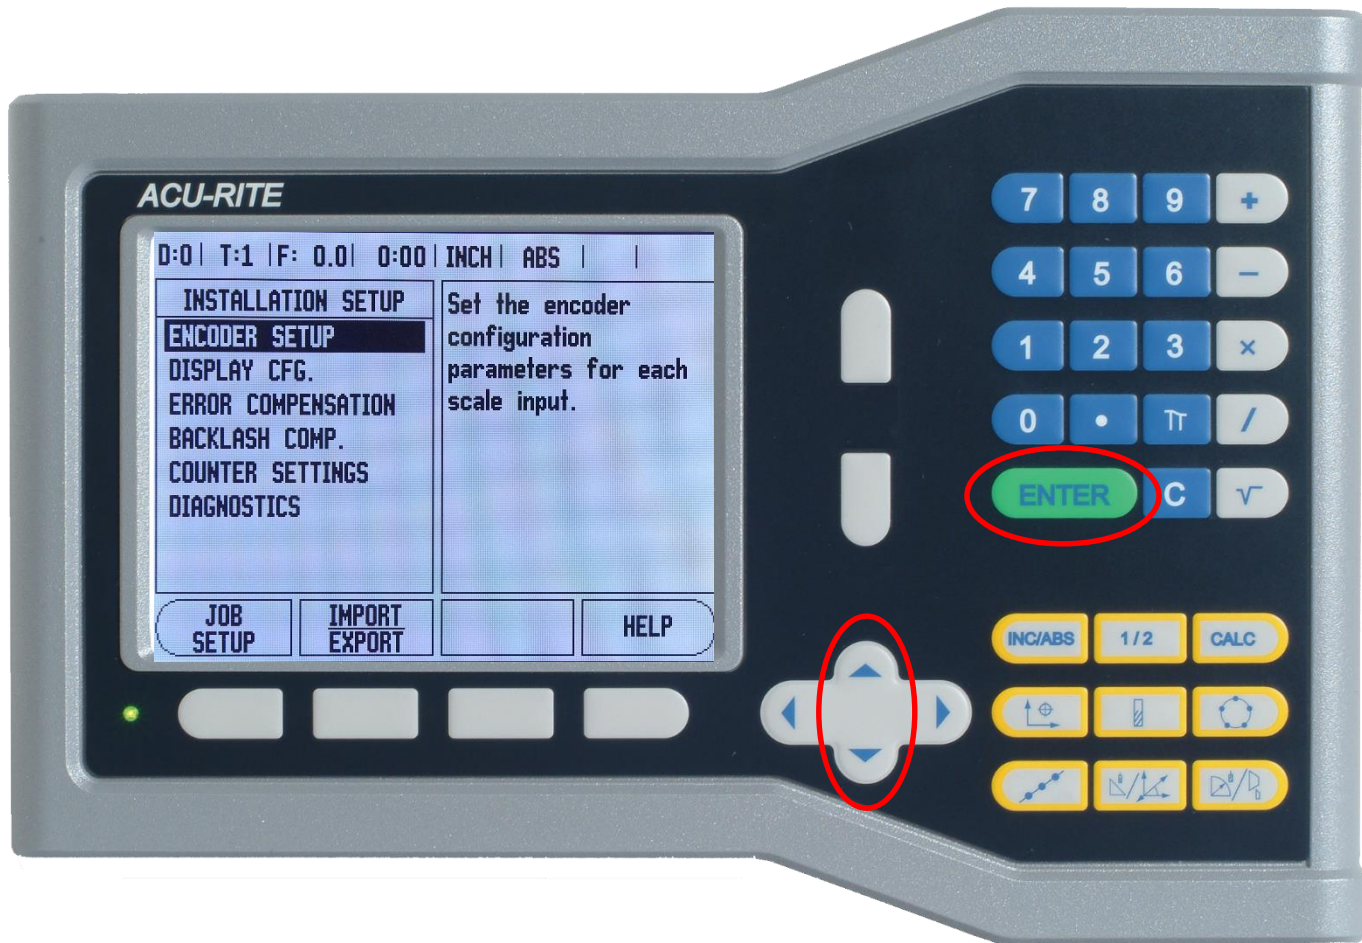


ACU-RITE® VUE: Changing Count Direction



“ENCODER SETUP” should be highlighted. If it isn’t, use the  or  arrow soft keys to highlight it. Then press 

ACU-RITE® VUE: Changing Count Direction





Use the  or  soft keys to highlight the input axis you want to change. Then press 

ACU-RITE® VUE: Changing Count Direction

This icon shows you how many pages there are in this function and which page you are on.

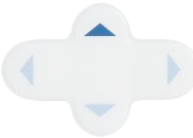

Use the  or  soft keys to highlight the “COUNT DIRECTION” box (shown on next page).

ACU-RITE® VUE: Changing Count Direction



Press the “POSITIVE / NEGATIVE” soft key **once** to change the count direction, then press **ENTER** to save your changes.

ACU-RITE® VUE: Changing Count Direction



Press the **C** soft key as many times as needed to get back to the home screen.

ACU-RITE® VUE: *Changing Count Direction*



Your DRO should now display the correct count direction for your scale.